



THE GREEN

cabin

Oven Degreaser

Non-caustic oven cleaner which removes grease and burnt on crud from hot working surfaces caused by spillage and condensed fats released during cooking.

How to use:

- Decant into a PET 1,2,4,5 bottle and add a spray top.
- This product is sprayed onto greasy surfaces, undiluted.
- It can also be used to wash greasy pans and dishes.
- This product is thin and pours easily through a small or medium funnel or tap

Description:

The Green Cabin Oven Degreaser is an eco-friendly non-caustic alkaline oven cleaner and carbon remover which is specially formulated to remove grease and burned-on crud from hot-working surfaces such as that found in ovens because of spillage and condensed fats released during the cooking operation.

Features & Benefits:

The Green Cabin Oven-Degreaser is easy to use and can be sprayed onto cold or hot surfaces. The Green Cabin Oven-Clean will not damage the underlying enameled surface of the oven interior.



The Green Cabin Oven Degreaser is a very strong detergent and users are urged to fully consult the MSDS before embarking on the cleaning process.

Applications:

The Green Cabin Oven Degreaser is primarily for use in baking and grilling environments where burnt on foods and carbon build up is a problem.



online eco detergent refilling

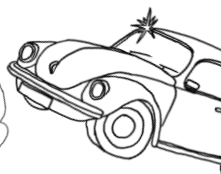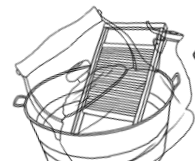



THE GREEN cabin

The Green Cabin Oven Degreaser can be used to remove stubborn grime build-ups outside the oven too, like that which can be found on floors, in fume-hoods, and on bulk tankers which have endured spillage of vegetable oils and animal fats.

Additional Benefits:

The Green Cabin Oven Degreaser is designed to perform exceptionally in areas where water quality and water hardness is an issue. It is specially formulated to react with metal oxides to form a protective film on metal surfaces.

The Green Cabin Oven Degreaser is intelligently formulated to effectively convert dirt deposits into small suspended particles that rinse away without redepositing on freshly washed surfaces. Formulated non-caustic solution.

Product Features:

- ✓ Non-Caustic
- ✓ Slices Through Grease
- ✓ Removes Baked on Carbon
- ✓ Odourless
- ✓ No harmful fumes

Directions for Use:



The Green Cabin Oven Degreaser should best be sprayed directly onto the surface using a spray bottle, ensuring that the liquid is projected well into the tiniest nooks and crannies of the relevant cooking equipment.

For very badly burnt on carbon and fats, first allow the product to soak onto the affected surface and keep the surface wet by re-applying as and when necessary. Allow to soak for 15 to 30 minutes.

For extra effectiveness pre-heat the surface to the point that the surface is warm to the touch. The surface should not be so hot that any evaporation occurs.



online eco detergent refilling

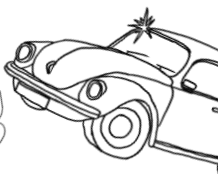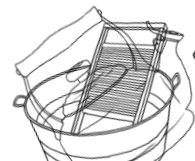



THE GREEN
cabin

Keep the surface wet by re-applying. The Green Cabin Oven Degreaser must be used undiluted.

For Best Results:

Use with The Green Cabin's full range of bio-enzymatic products which benefit each other as you use them.

Save money and improve performance while reaping multiple benefits compared to traditional chemicals.

Avoid using disinfectants and harsh chemicals, these kill our beneficial micro-organisms and harm the environment.

Safety Precautions:



Wear Personal Protective Equipment (P.P.E.'s) when applying (rubber or PVC gloves and eye protection) at all times.

Shelf Life & Storage:

Eco-friendly Green Cabin Oven-Clean may be stored for up to one year in the original packaging, and under ambient conditions. Store between 10°C - 38°C.




online eco detergent refilling

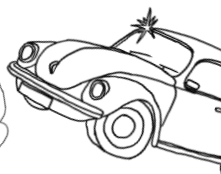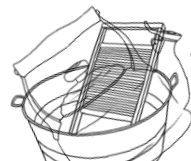



THE GREEN
cabin

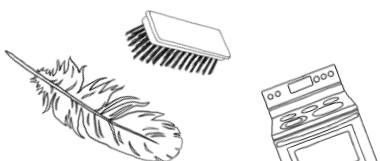

online eco detergent refilling

